

*multi-product
operating
software
on PC*



Qualistar[®]

Megohmmeters



Earth testers



C.A. 8230

▶ The **DataView**[®] multi-product software is compatible with:

- The MTX Mobile family of multimeters
- Qualistar[®] energy analysers
- C.A. 8230 and C.A. 8220 power analysers
- C.A. 6470 earth testers
- C.A. 6543, C.A. 6547 and C.A. 6549 megohmmeters
- And other measurement instruments

MTX Mobile



C.A. 8220



▶ Simply connect your instrument to your PC via:

- the RS 232 interface
- the USB link
- Bluetooth


Ergonomics

The *DataView*® software is very simple to use. When the latest version is activated, it recognizes the instrument connected to the PC and automatically opens the corresponding menu. The user can directly access the data stored in the instrument and its configuration, presented as a tree structure, as well as the different measurements in real time, depending on the case.

Configuration of the instrument

The user can then configure the various parameters required:

- for the instrument: recording parameters, channel configuration, etc.
- for measurement: date and time, language, alarm and measurement mode

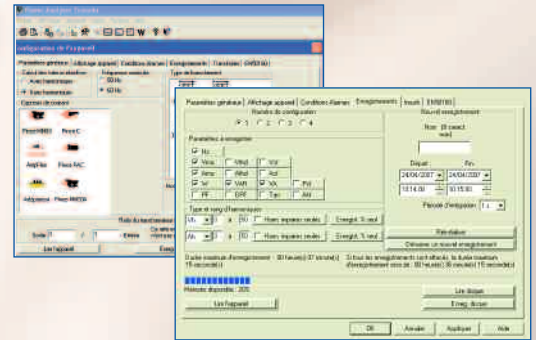


Real-time measurements

DataView® allows real-time display of the measurement values on the PC screen, depending on the instrument connected.

With the Qualistar®, for example, you can display wave forms, trends, harmonic spectra and summaries of the values in text format.

With the C.A 6549 megohmmeter you can view measurement curves (R(t) and/or R(U)) and samples measured.

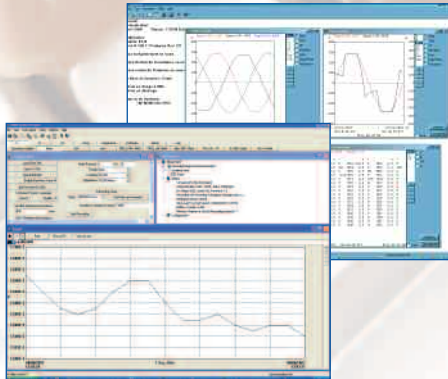


Recording

The measurements recorded in the instrument can be retrieved simply by selecting "Recording" in the general menu. They are then displayed instantaneously.

Users can then choose the values which they require (RMS, THD, VA, etc.) as well as the format (wave forms, harmonics, table, etc.).

DataView® can then be used for processing and qualitative analysis of the measurements. It is possible to zoom on part of the curve, select parts to be displayed or masked, modify the colours, etc.

It is also possible to export data to Excel.

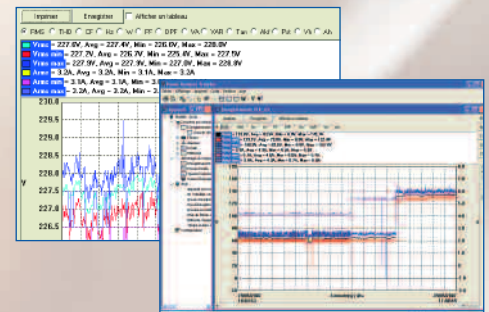


Printing of reports

A wide range of predefined report models are available for quick printing.

Users can also create their own models to suit their requirements.

With the Qualistar®, *DataView*® provides the report directly in the form of a table summarizing the parameters **in accordance with the EN50160 standard**.

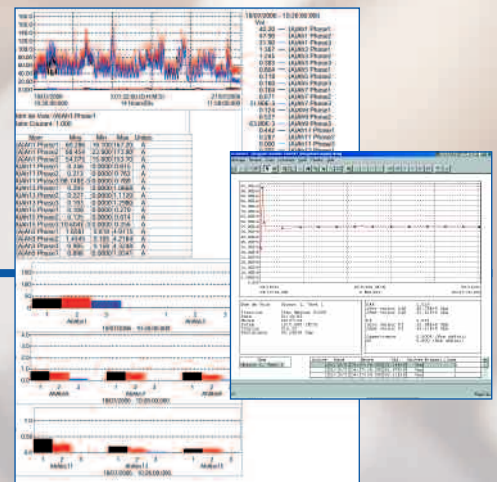

REFERENCE FOR ORDERING

Operating software on PC

P01.1020.58

Minimum operating system requirements:

- Windows® 2000,
- Windows® XP,
- Windows® Vista



FRANCE
Chauvin Arnoux
190, rue Championnet
75876 PARIS Cedex 18
Tél : (33) 01 44 85 44 85
Fax : (33) 01 46 27 73 89
info@chauvin-arnoux.com
www.chauvin-arnoux.com

UNITED KINGDOM
Chauvin Arnoux Ltd
Waldeck House - Waldeck Road
MAIDENHEAD SL6 8BR
Tel: +44 1628 788 888
Fax: +44 1628 628 099
info@chauvin-arnoux.co.uk
www.chauvin-arnoux.co.uk

MIDDLE EAST
Chauvin Arnoux Middle East
P.O. BOX 60-154
1241 2020 JAL EL DIB (BEIRUT)
Tel: +961 1 890 425
Fax: +961 1 890 424
camie@chauvin-arnoux.com
www.chauvin-arnoux.com

For assistance and ordering